




UDH-160/132 Triple Cue Detector/Failsafe Parts List (Solid Aluminum type Ground Roller)

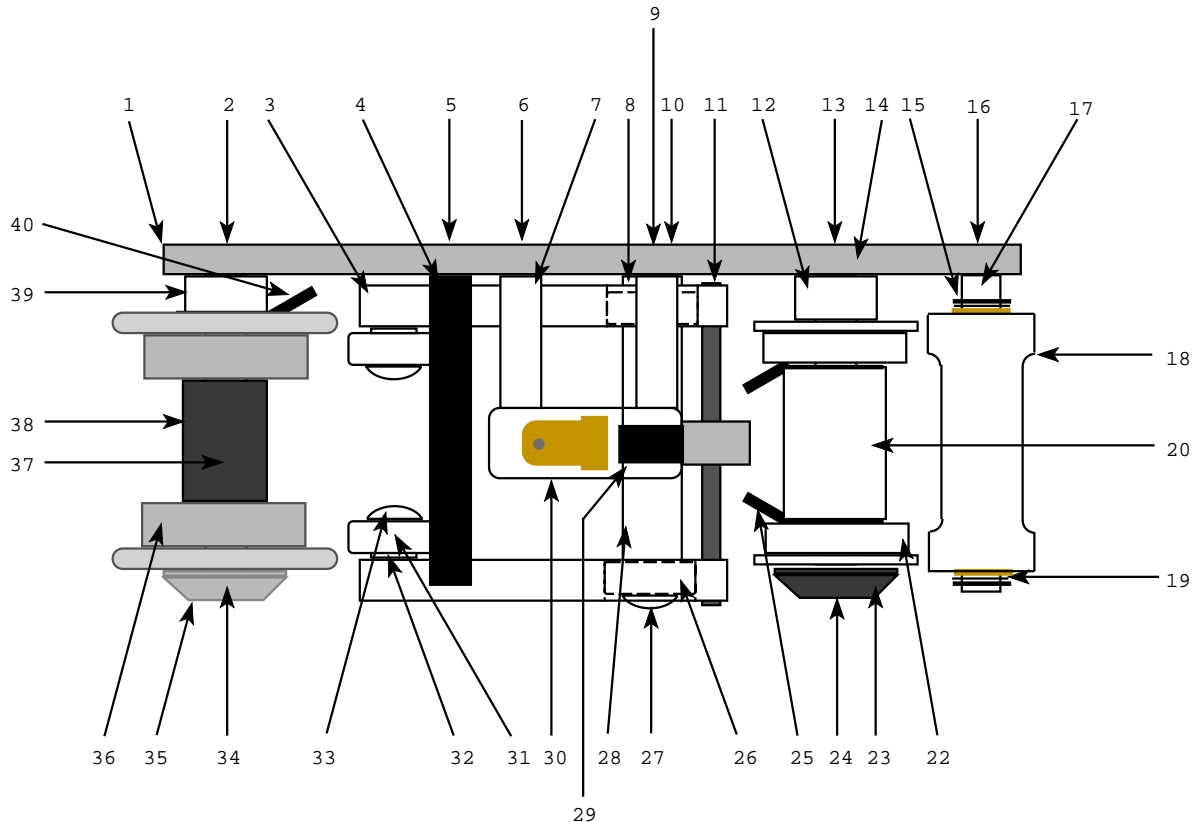

Ref.#	Part #	Description	Ref.#	Part #	Description
1	UDH-1-101	Main Chassis	21	SFR6ZZ	Bearing, Cue Roller
2	SP8F-1/2	8-32x1/2" Phillips Flat Head Screw	22	PCD-754	Cap, Cue Roller End
3	UDH-1-102	Failsafe Arm	23	SHCS8-3/8	8-32x3/8" Socket Head Cap Screw
4	UDH-1-109	Failsafe Arm Upper Stop	24	PV18-38R	Lug
5	SP8 F-1/2	8-32x1/2" Phillips Flat Head Screw	25	R4ZZ	Bearing
6	SP4F-1/2	4-40x 1/2" Phillips Flat Head Screw	26	SP8P-3/8	8-32x3/8" Phillips Pan Head Screw
7	UDH-1-108	Standoff Failsafe Switch (2)	27	UDH-1-106-2	Spacer, Failsafe Arm Center (2)
8	UDH-1-106-1	Spacer, Failsafe Arm Inner	28	UDH-1-111	Failsafe Arm Lower Stop
9	SP8F-1/2	8-32x1/2" Phillips Flat Head Screw	29	V3L-2102-D8	Switch, Failsafe
10	UDH-1-105	Shaft, Failsafe Arm Mounting	30	R4ZZ	Bearing
11	DP.0625x375	Dowel Pin 1/16x3/8	31	UDH-4-97	Spacer, Failsafe Arm Bearing
12	UDH-1-104	Insulating Spacer	32	SP10P-1/2	10-32x1/2" Phillips Pan Head Screw
13	SP8F-1/2	8-32x1/2" Phillips Flat Head Screw	33	SHCS8-3/8	8-32x3/8" Socket Head Cap Screw
14	UDH-1-1205	Shaft, Cue Bearing	34	UDH-1-124	Cap, Cross Cue Roller End
15	SR-25	Ring, 1/4" Retaining	35	UDH-1-123	Roller, Cross cue (2)
16	SP8F-1/2	8-32x1/2" Phillips Flat Head Screw	36	UDH-1-103	Shaft, Cross Cue Roller
17	UDH-1-36	Shaft, Ground Roller	37	UDH-1-122	Spacer, Cross Cue Roller
18	UDH-1-132	Bearing, Ground Roller	38	UDH-1-121	Spacer, Cross Cue Insulating
19	DB8D5	Shim, Ground Roller	39	PV18-38R	Lug
20	PCD-751	Spacer, Cue Roller	40		